


INTEGRATION WITH DOORBIRD IP VIDEO DOOR STATIONS | QUICK START GUIDE

Basic Setup Steps - Monitor

1. Connect unit to the network, it can be powered by a PoE connection, or separate power using pins 1, 2
2. Select "MORE" on the right side of the screen
3. Select "Setting"
4. Select "Status" and keep note the IP Address on the bottom of the screen

Basic Setup Steps - DoorBird

Open the SIP Settings in the DoorBird App (Administration -> Login -> SIP Settings)

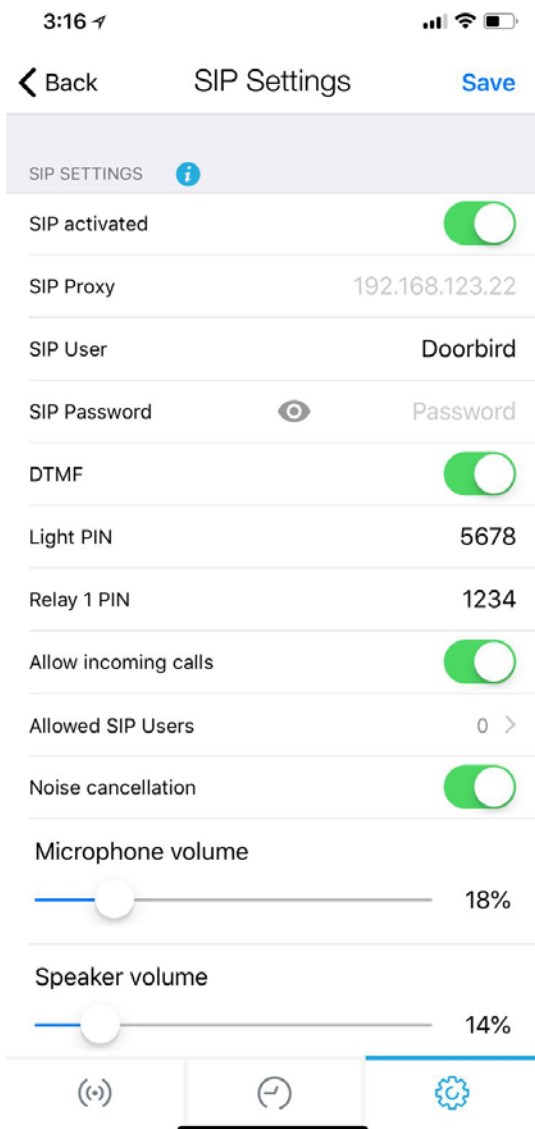

SIP User: This will be the caller ID


DTMF: Activate this option to enable door opener when you enter a combination of digits (Monitors are set to unlock # by default)

INTEGRATION WITH DOORBIRD IP VIDEO DOOR STATIONS | QUICK START GUIDE

Basic Setup Steps – Continued

Administration -> Schedule for actions

1. Select Bell icon then switch the category to "SIP call"
2. Click on the blank rectangle to quickly highlight all for the schedule

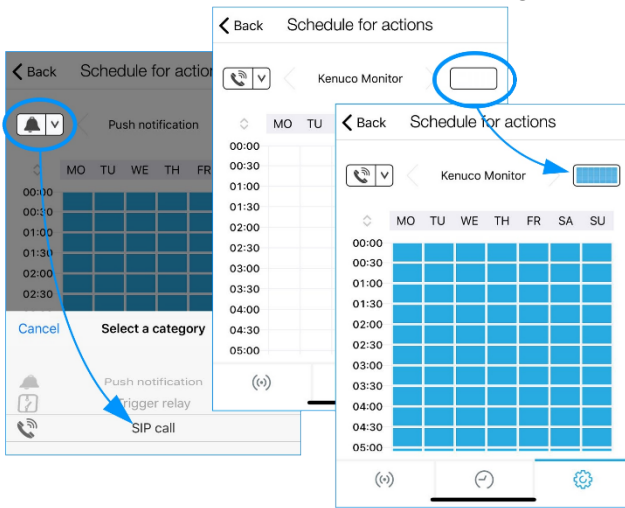

Basic Setup Steps – Continued

Administration -> SIP Calls -> Add

1. For "SIP address" input the IP address of the Kenuco Monitor and Save

