

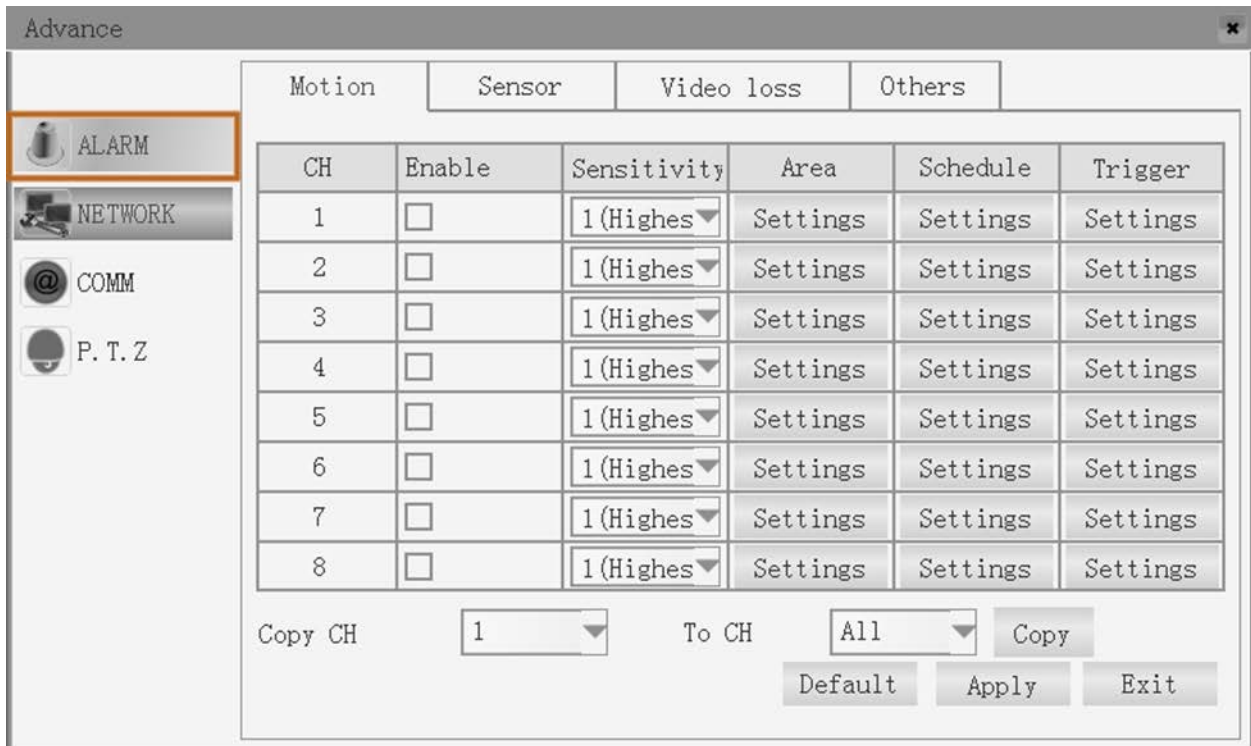


1. From the main menu (pictured below) click *Advance* then *Alarm*.

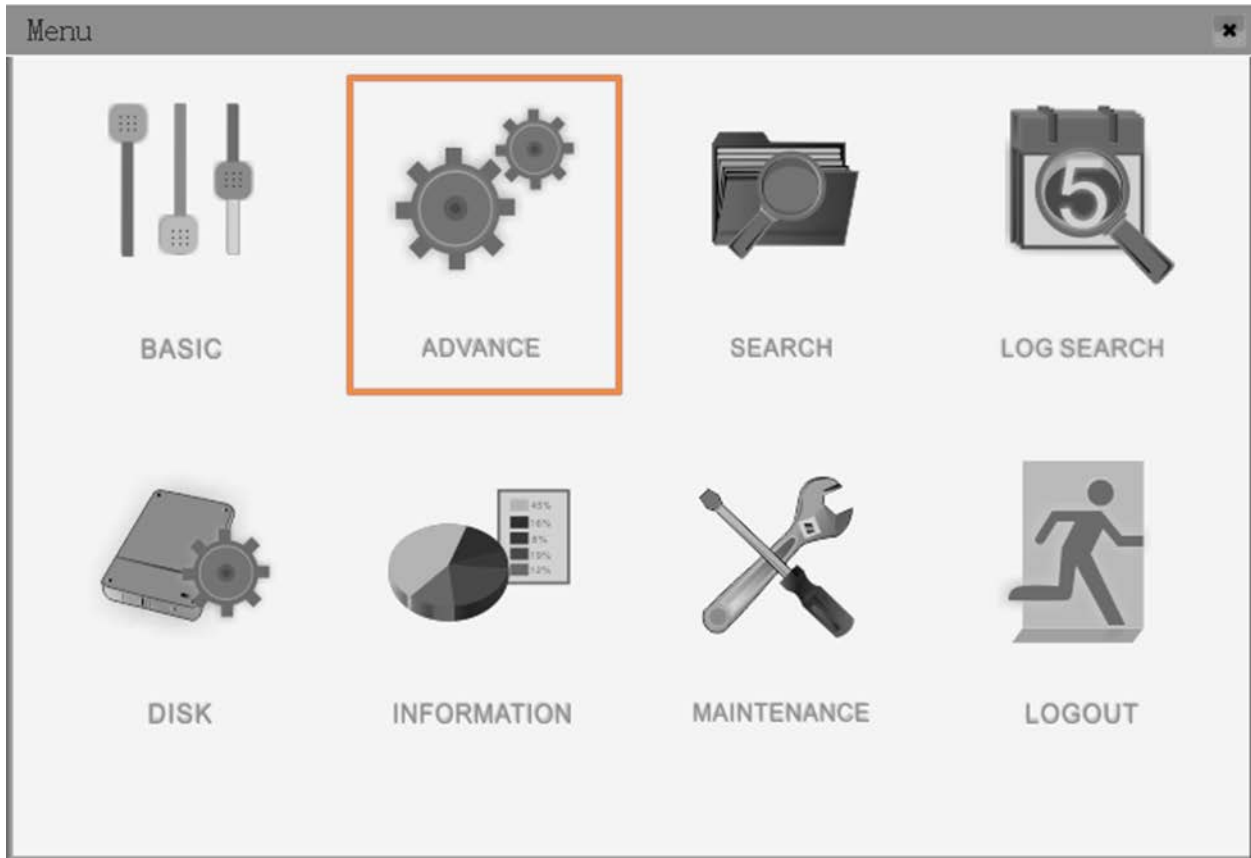


2. Check the *Enable* box to enable motion detection.
3. Click on *Schedule*.
4. Highlight the times and dates in **red** by left-clicking and dragging across the time and day areas.
5. Copy the alarm schedule to All days.
6. Make sure to press *Apply* after each change.

*Refer to your DVR's User Manual for detailed instructions for each option.*

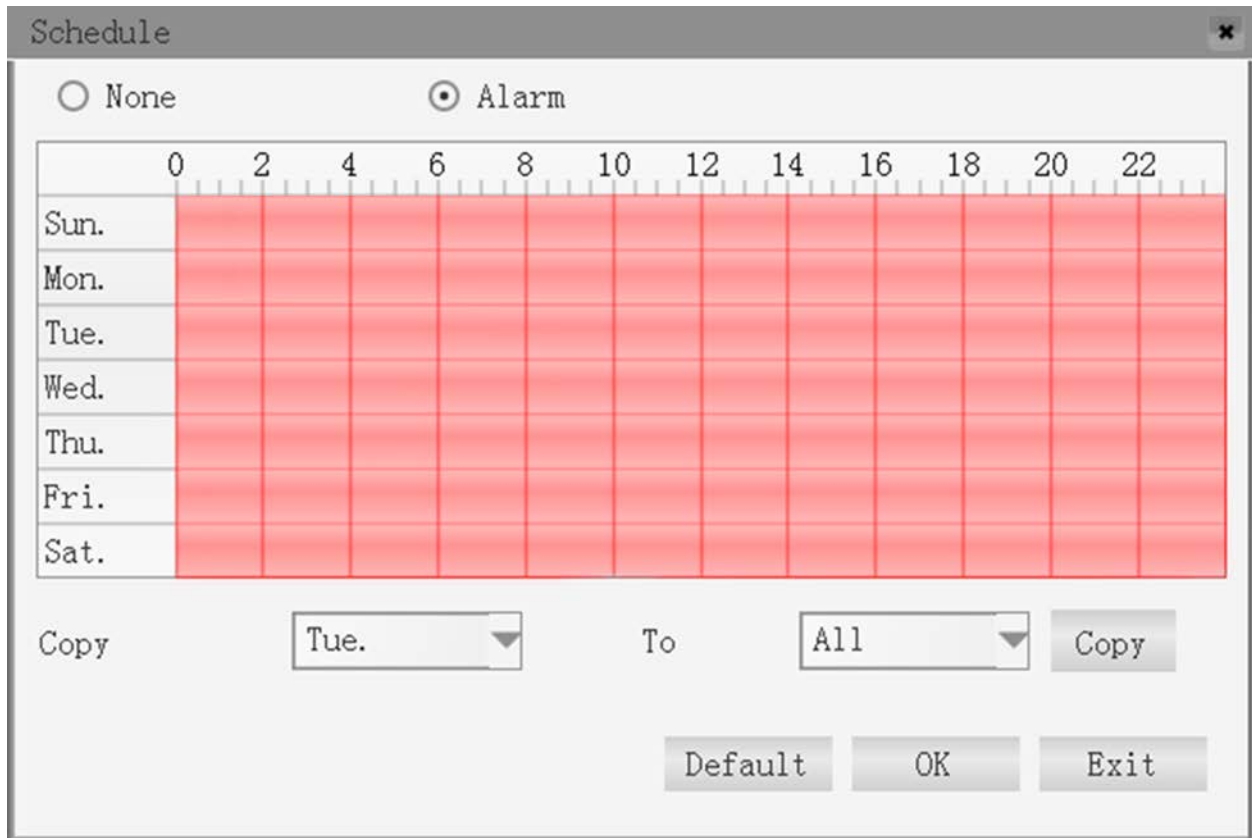


7. Temporarily set the buzzer to 10 seconds under *Trigger Settings*.
8. Press *OK*.
9. Attempt to trigger the alarm. If the buzzer sounds, you've configured that channel's motion detection settings correctly.
10. Disable the buzzer.
11. Press *OK*.
12. Press *Apply*.

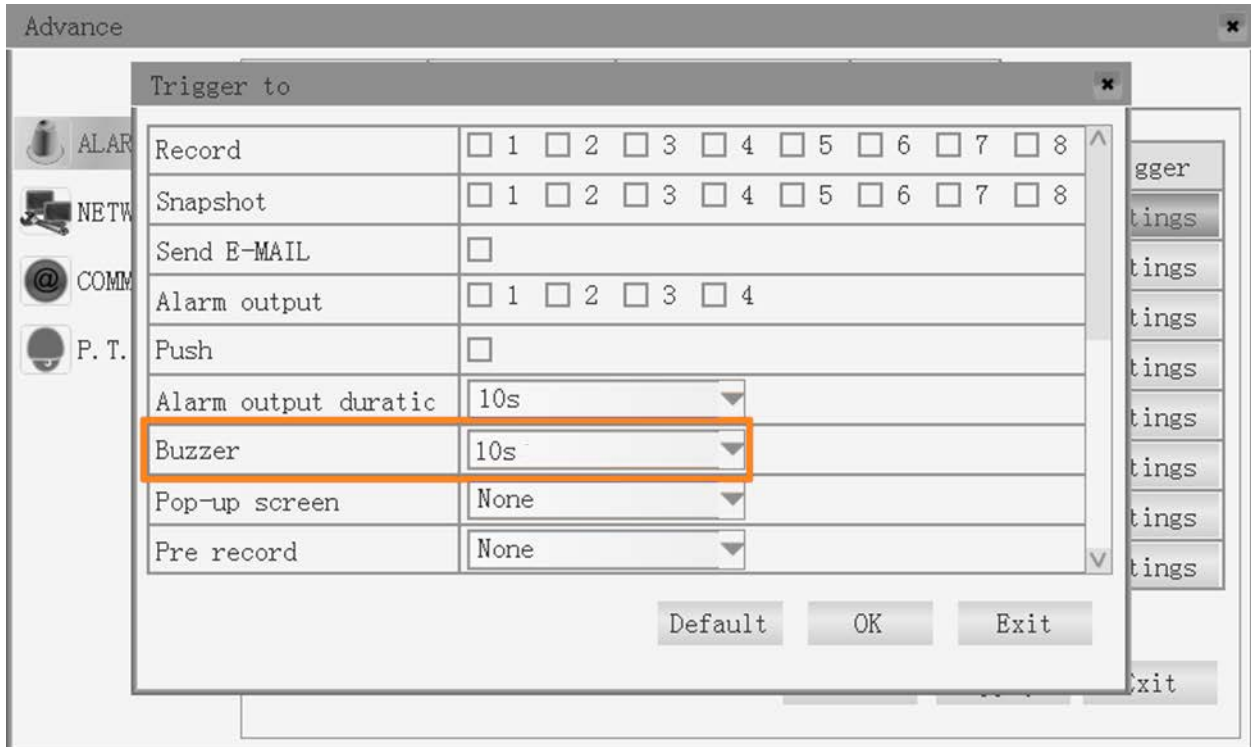


**TO HAVE THE DVR ONLY RECORD WHEN MOTION IS DETECTED**

1. Return to the main menu and select *Basic* then *Record*.
2. Enable the channels you want to record video.
3. Select *Schedule* from the drop-down menu under *Mode*.
4. Press *Apply*.

*Refer to your DVR's User Manual for detailed instructions for each submenu.*

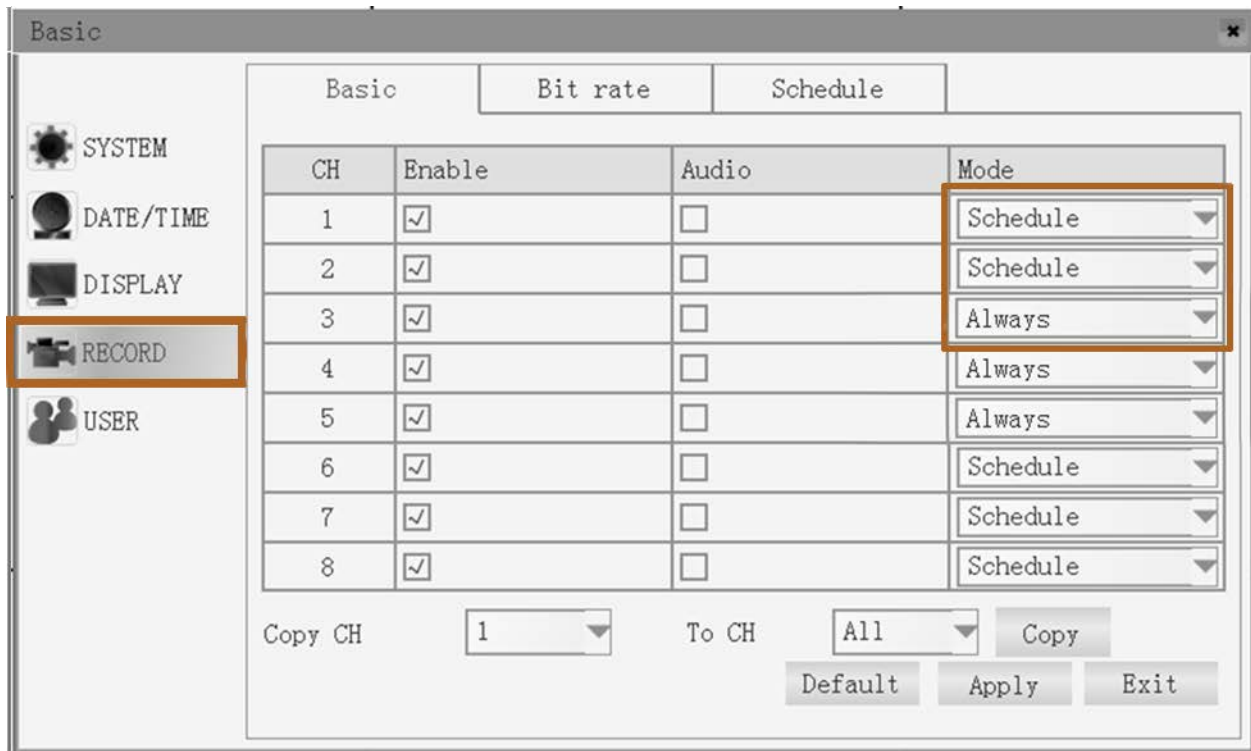

5. Enter the *Schedule* submenu.
6. Press *Alarm*.
7. Select the days and times you want motion detected by highlighting the areas of the schedule **red**.
8. Copy the settings to All channels.
9. Press *Apply*.

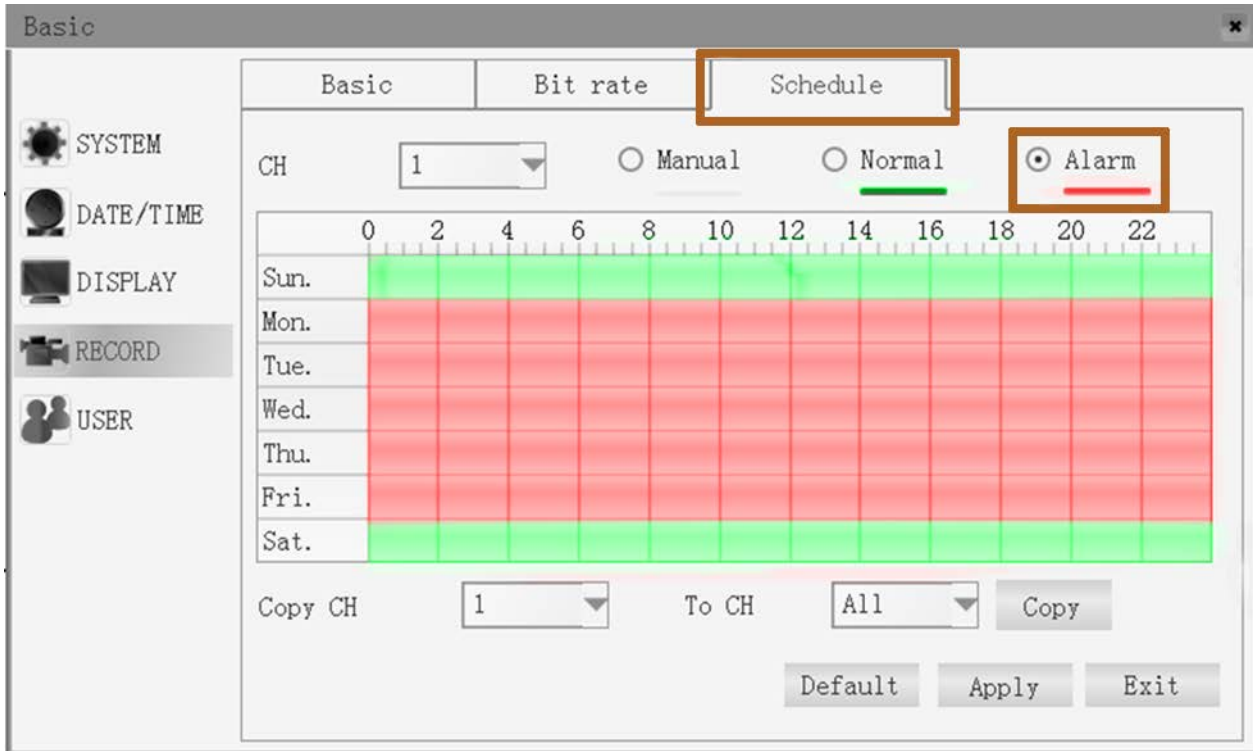

10. Test your settings by allowing the DVR to run for about 5 minutes.
11. Enter the *Playback* menu and confirm that only red lines are present within the playback track.